

The Up/Down Buttons are pushed in to activate the hoist normally. If the buttons or their contacts are bad the hoist will do nothing. It is also possible that the hoist will do nothing in one direction and operate normally in the other direction.

Inspection procedure

- Use a multi-meter to check normal operation of the UP/DN contacts when depressed.
- Inspect for loose wires.
- Inspect for visible signs of damage.

Corrective actions: Replace damaged or non-working parts as required. Make sure all electrical connections are secure.

For questions or comments, contact Customer Service at 1-800-560-CLIMB (2546) or customerservice@safeworks.com.